


## Processing Information for the Label Manufacturer

*Label Link*® Splicing System for labels with exterior winding

- Remove lower protective cover marked with a black line.
- Adhere the *Label Link*® tape to the uncut reel core.
- When pushing the uncut roll core onto the spindle of the roll core cutting machine the narrow strip of the cover is oriented forwards in the rotational direction.
- Cut reel cores to the width of the release paper.
- When the cut reel cores are mounted on the mandrel of the winding machine, the narrow strip of the cover is leading in direction of winding.
- Pull off the upper protective cover.  
(For convenient handling, the upper protective cover is slit asymmetrically and can be identified by the approximate 1.5 mm wide red slot.)
- Cut the release paper flush with the edge of the first label. The release paper must not jut out at the position of the first label!
- Position the beginning of the release paper flush with the „◀SPECIAL“ marked edge and adhere the release paper with its backside to the *Label Link*® tape.
- Wind up the web in direction of the arrows ▶

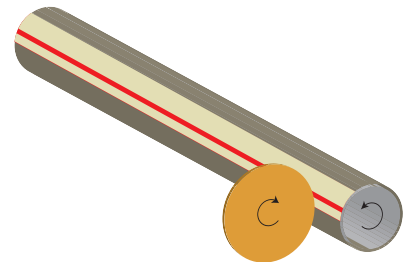

### Attention!

In case of partly transparent labels or rolls with interior winding different processing might become necessary.

Please check with:

Verpackungstechnik Jetter GmbH.

To learn more about *Label Link*® please visit: [www.labellink.de](http://www.labellink.de)

Detailed handling instructions you can watch as Video on

<https://labellink.de/en/video-instruction-for-use-labellink-splicing-system/>

